

Printer is not ready

Verbindung mit Putty aufbauen

```
ls /dev/serial/by-id
```

Beispiel Ausgabe : "usb-1a86_USB_Serial-if00-port0"

Diesen Port in eurer **Printer.cfg** eingtragen

Beispiel:

```
[mcu]
serial: /dev/serial/by-id/usb-1a86_USB_Serial-if00-port0
restart_method: command
```

<https://www.youtube.com/embed/HzYVKNzeW8w>

Revision #1

Created 17 March 2023 12:23:24 by Cryd

Updated 22 March 2023 10:34:16 by Cryd